



# Deluxe Pitchback

## Assembly Instructions

Please read directions thoroughly before assembling your Deluxe Pitchback.



1. Take all parts out of the box.
2. Lay out the frame and proceed to connect the three "U" shaped frames together, as shown in Figure 1.
3. Attach the bottom "U" shaped frames to the "Y" frame holder (Part 3 and 4). Put each "U" frame into the "Y" frame holder by inserting each side equally. Attach the top "U" frame to the "Y" frame holder (Part 3 and 4). Remember to insert the frames sides equally.
4. Attach the net to the top corners, bottom front corners, and bottom back corners of the frame, using bungee balls.
5. Secure the net to the frame by starting with the top "U" frame and then the two sides. Attach 13 connectors to the top "U" frame as per Figure 2. The two additional connectors used on the top

"U" frame are for attaching the net to the frame at the Y. Attach 11 connectors to each of the bottom "U" frames as per Figure 2.

6. Adjust the position of the fasteners to ensure that the net is stretched evenly around the frame. Attach the connectors by inserting the plastic knob into the middle of the cord.

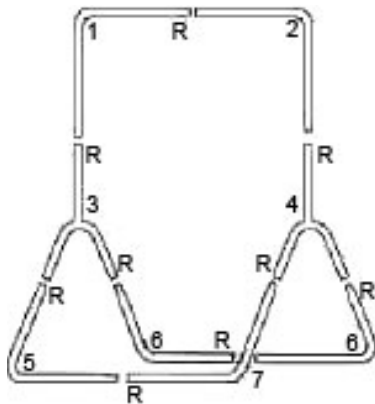


Figure 1.

R=Reduced End

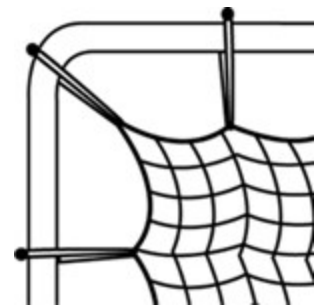


Figure 2.